


Battery Removal

The battery (1) is in the battery box below the seat.

1. Make sure the ignition switch is OFF.
2. Open the front seat (page 93) and remove the mat (page 135).
3. Remove the screw (2) and battery cover (3).
 - To remove the battery cover, pull the front of the battery cover until it touches the upper side of center compartment (4) while holding the rear end of the battery cover up. Pull out the battery cover backward. Be careful not to pull the rear end of the battery cover up too much.
4. Remove the screws (5) and battery band (6).
5. Disconnect the negative (-) terminal lead (7) from the battery first, then disconnect the positive (+) terminal lead (8).

- | | |
|-------------------|------------------------|
| (1) Battery | (4) Center compartment |
| (2) Screw | (5) Screws |
| (3) Battery cover | (6) Battery band |

6. Pull out the battery from the battery box using the tape (9).

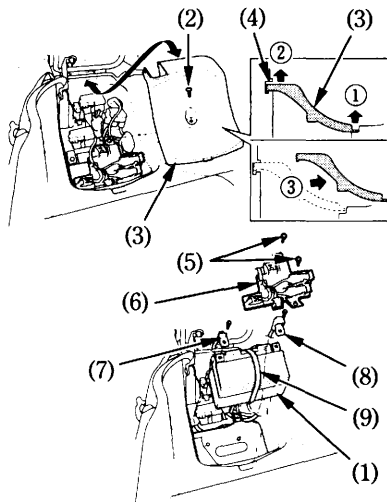

- | | |
|--------------------------------|----------|
| (7) Negative (-) terminal lead | (9) Tape |
| (8) Positive (+) terminal lead | |