

<b>(Ref.No.) Description</b>	<b>Function</b>
(5) Parking brake indicator (red)	It lights as a reminder that you have not released the parking brake.
(6) Honda smart card key indicator (amber)	<p>Push the ignition switch. When the ID is authenticated, the Honda smart card key indicator lights. When you turn the ignition switch ON, the Honda smart card key indicator will go off in 2 seconds when the engine stop switch is at ○ (RUN) (page 66 ).</p> <p>When the battery is low, the Honda smart card key indicator flashes 5 times when you turn the ignition switch ON (page 67 ).</p> <p>Flashes when the Honda smart card key has operating problems (page 67 ).</p>
(7) Low oil pressure indicator (red)	<p>Lights when the engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p><b>NOTICE</b></p> <p>Running the engine with insufficient oil pressure may cause serious engine damage.</p>