


Rear seat

To remove the rear seat (1), open the front seat (page 101). Unlock the prongs (2) from grommets (3), and pull the rear seat forward and up.

To install the rear seat, align the recesses (4) with the tabs (5). Push the prongs into grommets.

Do not put the card key, mechanical key and ID tag under the rear seat.

The card key, mechanical key or ID tag may be locked in the compartment and the card key system may not be activated.

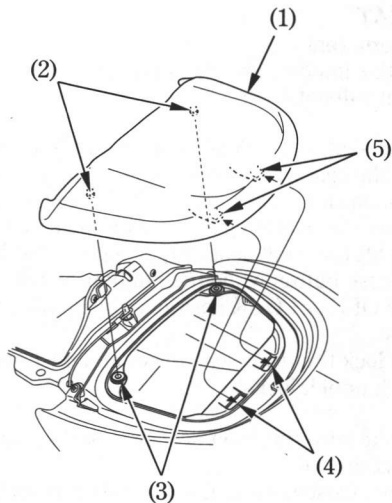

- (1) Rear seat
- (2) Prongs
- (3) Grommets

- (4) Recesses
- (5) Tabs