


## REAR BODY LOWER COVER

### Removal:

1. Remove the screws (1).
2. Remove the hooks (2) by pulling back the rear body lower cover (3).
3. Remove the rear body lower cover.

### Installation:

- Installation can be done in the reverse order of removal.

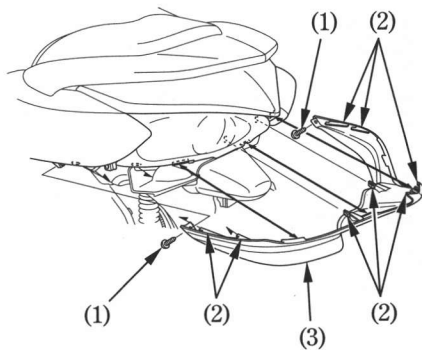

(1) Screws  
(2) Hooks

(3) Rear body lower cover