

### Fuse Box:


The fuse box is located under the seat.

The specified fuses are:

5 A, 10 A, 15 A, 30 A, 40 A ...NSS250S

5 A, 10 A, 15 A, 30 A, 40 A ...NSS250A

1. Open the front seat (page 101) and remove the inner mat (page 143).
2. Remove the battery cover (page 171).
3. Open the fuse box cover (1).

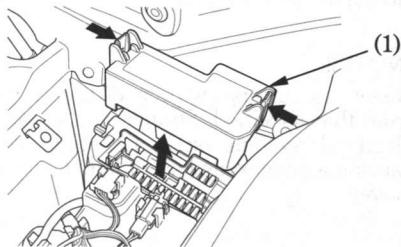

(1) Fuse box cover