


Front Turn Signal Bulb


1. Remove the front lower cover (1) by removing the screw (2) and clips (3) (page 150).

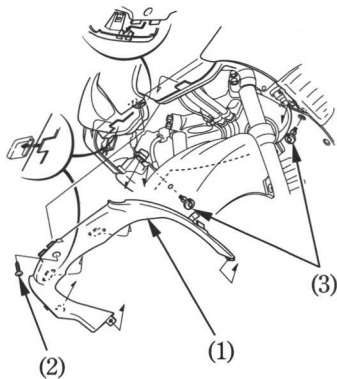

(1) Front lower cover
(2) Screw

(3) Clips

2. Remove the socket (4) turn it counterclockwise and pull out the bulb (5).
3. Install a new bulb in the reverse order of removal.

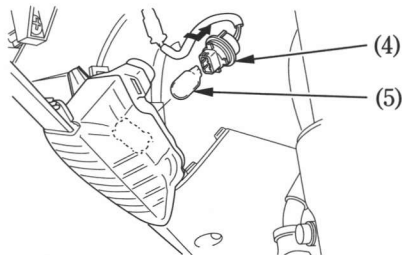

(4) Socket
(5) Bulb