


## ACCESSORY SOCKET

Open the cover (1) to gain access to the accessory socket (2).

Rated capacity is 12 watts (12volt, 1amps).

### NOTE:

- \* To prevent battery run down or weak battery, keep the engine running while drawing current from the socket.
- \* Turn the headlight OFF or set it in the LO beam. Battery run down or damage to the accessory socket cause result.
- \* To prevent entry foreign matter, be sure to close the cover when the accessory socket is not used.

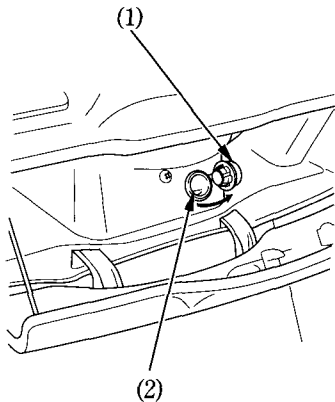

- (1) Cover
- (2) Accessory socket