

## When the Idle Stop System Does Not Function (NSS250A)

Perform the following before taking your scooter to see your Honda dealer.

Symptom	Check	Remedy
Idle stop is not functioned.	Is the idle stop switch set in the IDLING STOP position ?	Set the idle stop switch in the IDLING STOP position.
	Is the engine cold ?	The idle stop system will not function when the engine is cold. Warm up the engine to the operating temperature.
	Is the scooter brought to a complete stop ?	The idle stop system will not function unless the scooter is run at speed 0 km/h.