

Symptom	Check	Remedy
Idle stop is not functioned.	Is the throttle opened ?	The idle stop system will not function if the throttle is opened. The throttle is closed.
	Has the scooter been run after it was stopped last ?	The idle stop system will not function if the scooter has not been run at speed above 10 km/h after starting the engine last. Ride the scooter once again.
	Is the rider seated in the seat in proper posture ?	The idle stop system will not function if the seat is not loaded with weight properly. Sit in the seat in proper posture.