


## BELT CASE AIR CLEANER

(Refer to the maintenance precautions on page 78).

1. Remove the left floor skirt (1) by removing the clip (2) and screws (3).

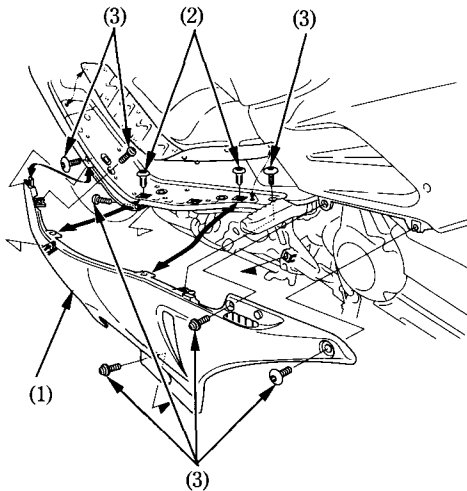

- (1) Left floor skirt
- (2) Clips
- (3) Screws