


Fuse box:

The fuse box is located in the battery box.

The specified fuses are:

10A, 15A, 20A, 30A

1. Lift the seat (page39) and remove the battery cover (page95).
2. Open the fuse box cover (1).
3. Pull out the old fuse and install a new fuse. The spare fuses (2) are located in the fuse box.
4. Install the removed parts in the reverse order of removal.

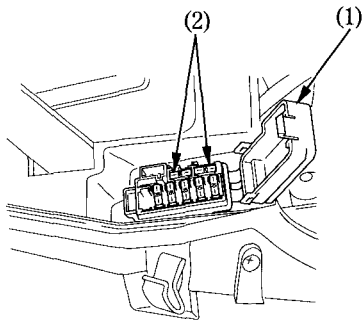

(1) Fuse box cover

(2) Spare fuses