


## Rear Turn Signal Bulb

1. Remove the maintenance lid (page 102 ).
2. Turn the socket (1) 90° counterclockwise and remove it.
3. Pull out the bulb (2) without turning.
4. Install a new bulb in the reverse order of removal.

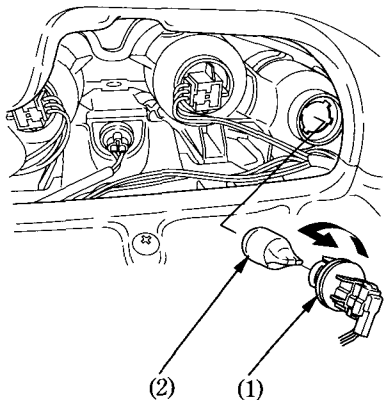

- (1) Socket  
(2) Bulb