

Ref. No.	Description	Function
7	Oil pressure warning light (red)	<p>Lights when the engine oil pressure is below the normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION: * Running the engine with insufficient oil pressure may cause serious engine damage.</p>
8	Side stand indicator	<p>Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 73) is activated.</p>
9	Turn signal indicator	Flashes when either turn signal is operated.
10	Neutral indicator (green)	Lights when the transmission is in neutral.
11	High beam indicator (blue)	Lights when the headlight is on high beam.
12	Tripmeter reset knob	Resets tripmeter to zero (0). Turn knob in direction shown.