

| ITEM | FREQUENCY | WHICHEVER → COMES FIRST | ODOMETER READING [NOTE (1)] | | | | | | | | REFER TO PAGE |
|------|------------------------|-------------------------------|-----------------------------|-------|---|----|----|----|----|-------|---------------------|
| | | | x 1,000 km | 1 | 6 | 12 | 18 | 24 | 30 | 36 | |
| | | | x 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | |
| | | | NOTE | MONTH | 6 | 12 | 18 | 24 | 30 | 36 | |
| | FINAL DRIVE OIL | | | | I | | I | | R | 67 | |
| | BRAKE FLUID | (NOTE 4) | | I | I | R | I | I | R | 17-19 | |
| | BRAKE PADS WEAR | | | I | I | I | I | I | I | 74-75 | |
| | BRAKE SYSTEM | | I | | I | | I | | I | 17-19 | |
| * | BRAKE LIGHT SWITCH | | | | I | | I | | I | 82 | |
| * | HEADLIGHT AIM | | | | I | | I | | I | - | |
| | CLUTCH SYSTEM | | I | I | I | I | I | I | I | 20-21 | |
| | SIDE STAND | | | | I | | I | | I | 76 | |
| * | SUSPENSION | | | | I | | I | | I | - | |
| * | NUTS, BOLTS, FASTENERS | | I | | I | | I | | I | - | |
| ** | WHEELS/TYRES | | | | I | | I | | I | - | |
| ** | STEERING HEAD BEARINGS | | I | | I | | I | | I | - | |