



Inspection

The reserve tank is behind the left side fairing. Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature with the motorcycle in an upright position. If the coolant level is below the LOWER level mark (3), remove the radiator grille (4) by removing the bolt (5), remove the reserve tank cap (6) and add coolant mixture until it reaches the UPPER level mark (2). Do not remove the radiator cap.

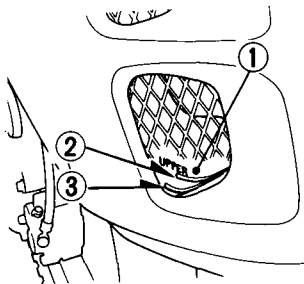

- (1) Reserve tank (3) LOWER level mark
(2) UPPER level mark

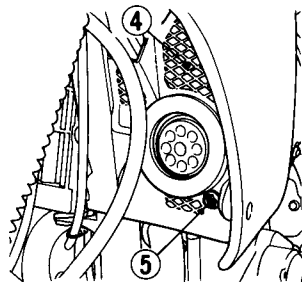

(4) Grille

(5) Bolt