

(Ref. No.) Description	Function
(1) Left turn signal indicator (amber)	Flashes when the left turn signal operates.
(2) Speedometer	Shows riding speed.
(3) Odometer	Shows accumulated mileage.
(4) Neutral indicator (green)	Lights when the transmission is in neutral.
(5) High beam indicator (blue)	Lights when the headlight is on high beam.
(6) Tachometer	Shows engine rpm.
(7) Right turn signal indicator (amber)	Flashes when the right turn signal operates.
(8) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p>CAUTION:</p> <p>* Running the engine beyond recommended maximum engine speed (tachometer red zone) can damage the engine.</p>