


Engine Oil Filter

NOTE:

* Change the filter after draining the engine oil.

1. Remove the oil filter bolts (1) and cover (2).

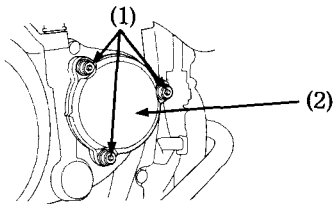


(1) Oil filter bolts

(2) Oil filter cover

2. Remove the oil filter element (3) from the cover.
3. Check that the oil filter cover O-ring (4) is in good condition and then install the new oil filter.

Use only the Honda genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.

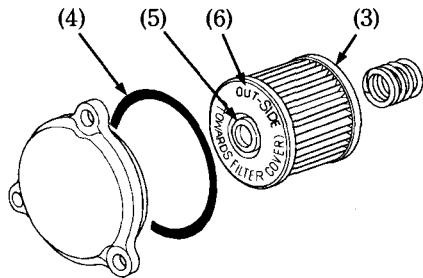

(3) Element

(5) Rubber seal

(4) O-ring

(6) OUT-SIDE mark