

• TRANSMISSION OIL CHANGE

Recommended oil


HONDA 4-STROKE OIL, SAE
10W-30 or equivalent.

Capacity

- At disassembly:
0.75 l (0.79 US qt, 0.66 Imp qt)
- At draining:
0.60 l (0.63 US qt, 0.53 Imp qt)

Replacement interval

- Every 2 years

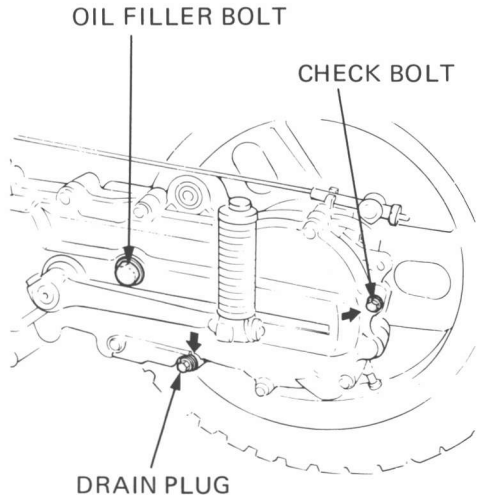

Replacement

- (1) Place the motorcycle upright on the center stand.
- (2) Remove the oil filler bolt and drain plug.
Drain the used oil from the transmission while the engine is warm.
This will ensure complete and rapid draining.
- (3) Clean and reinstall the drain plug.
- (4) Pour the recommended oil slowly through the oil filler bolt hole.
- (5) Loosen the oil check bolt. Oil should flow out of the oil check bolt hole. If oil does not flow out, add oil slowly through the oil filler hole until oil starts to flow out of the oil check bolt hole.
- (6) Tighten the oil check bolt and oil filler bolt securely.