


LOWER FAIRING

Removal:

1. Remove the middle fairing (page 46).
2. Remove the six bolts (1).
3. Remove the lower fairing (2).

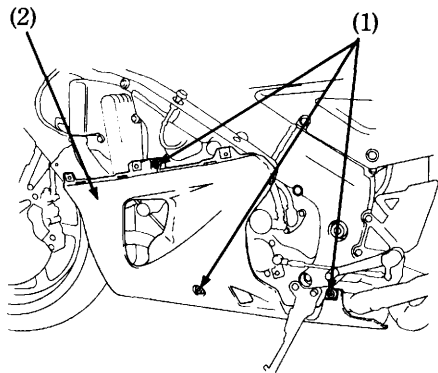

(1) Bolts (both sides)

(2) Lower fairing