
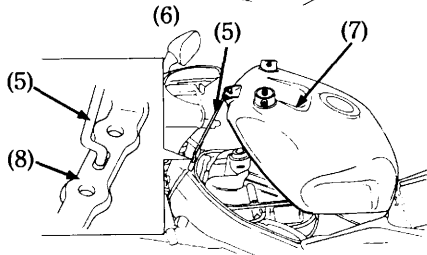


5. Remove the seat (page 43). Remove the rod (5) from the holders (6).
6. Raise the fuel tank (7) and support the fuel tank with the rod.

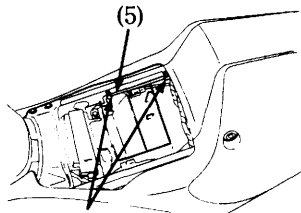

- | | |
|-------------|------------------|
| (5) Rod | (7) Fuel tank |
| (6) Holders | (8) Fairing stay |

To secure:

The fuel tank can be secured in the reverse order.

NOTE:

- * After securing the fuel tank, check the fuel tank breather and drain tubes for kinking or pinching and correct routing as necessary.
- * Reset the rod in the holders under the seat securely with the front end inserted in the tool box and the crank end facing down.