

MAINTENANCE STAND

Use two people to place the motorcycle on the maintenance stand.


▲ WARNING

*** Improper use of the maintenance stand may cause injury.**

- Be sure the maintenance stand is placed on a firm, level ground.
- Never ride the motorcycle on the maintenance stand or run the engine while the motorcycle is on the maintenance stand.
- Be sure the maintenance stand is fully engaged and the attaching bolt is fastened securely before working on the motorcycle.

To install:

1. Support the motorcycle on a firm, level ground using the side stand.
2. Install the maintenance stand on the motorcycle as follows:
 - ① Align the top ends of the maintenance stand (1) with the rear axle nut (2).
 - ② Turn the attaching bolt (3) in until resistance is felt.

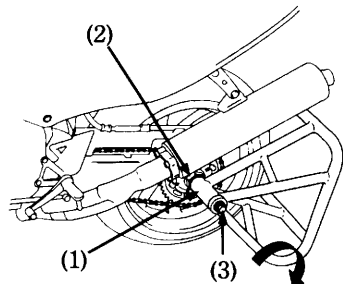

- (1) Maintenance stand
- (2) Rear axle nut
- (3) Attaching bolt