


Rear Wheel Removal

1. Place the motorcycle on the side stand.
2. Remove the center cap (1) and cotter pin (2).
3. With the rear wheel on the ground, loosen the wheel nut (3) while applying the rear brake.
4. Raise the rear wheel off the ground with the maintenance stand (page 68).
5. Remove the wheel nut, shim (4) and axle center collar (5).
6. Remove the rear wheel (6).

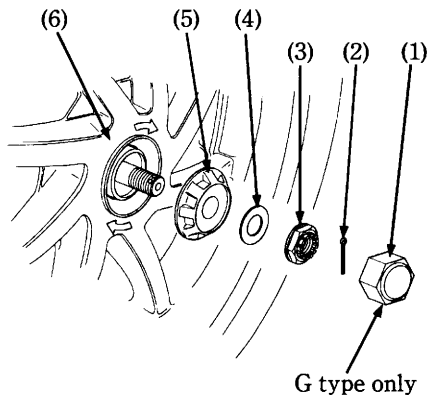

- | | |
|----------------|-------------------|
| (1) Center cap | (4) Shim |
| (2) Cotter pin | (5) Center collar |
| (3) Wheel nut | (6) Rear wheel |