


ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH

The ignition switch (1) is on the right side below the steering stem.

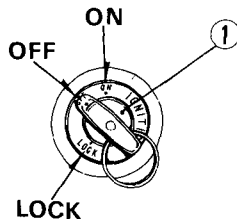

(1) Ignition switch

Key Position	Function	Key Removal
LOCK (Steering Lock)	The steering is locked. The engine and lights cannot be operated.	Key can be removed.
OFF	Engine and lights cannot be operated.	Key can be removed.
ON	Engine and lights can be operated. NOTE: * The headlight and instrument light operate whenever the engine is running.	Key cannot be removed.