

FUSE REPLACEMENT

(Refer to the maintenance precautions on page 51).

The fuse holder (1) is near the battery.

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. If this happens, the electrical system should be checked visually for damaged insulation or other possible malfunctions. If the problem cannot be located visually, the motorcycle should be examined by an authorized Honda dealer.

The specified fuse is:

7 Amp (DK type)


10 Amp (U type)

▲ WARNING

*** Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power at night or in traffic.**

CAUTION:

*** Turn the ignition switch OFF before checking or replacing the fuse to prevent accidental short-circuiting.**

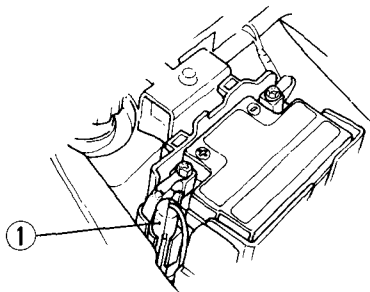

(1) Fuse holder