


Main Switch

The main switch ① is located on the left side below the front end of the fuel tank. Functions of the respective switch position are shown in the table at the right.

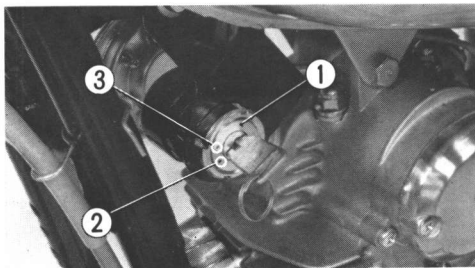

- ① Main switch
- ② "OFF" position
- ③ "ON" position

Key position	Function	Key removal
② "OFF"	All electrical circuits are open; engine can not be started.	Key can be removed.
③ "ON"	Electrical circuits are closed; engine can be started; headlight and tail/stop light can be operated; neutral indicator light is on when the transmission is in neutral.	Key cannot be removed.

Emergency Switch

The three position emergency switch ① (Page 11) is located on top of the right handle bar grip switch housing. In the "ON" position (center) the ignition circuit is complete and the engine operates. In the "OFF" position (either side of center) the ignition circuit is open and the engine will not operate.