

Clutch Adjustment


When the clutch linkage and cable are properly adjusted, operation of the clutch hand lever will completely engage and disengage the clutch. Absence of free play will prevent full engagement and cause the clutch to slip. Excessive free play will prevent full disengagement and cause the clutch to drag.

1. Check the position of the clutch lever for proper setting. The center of the clutch cable connecting pin ① should be in alignment with the lower part of the index mark ② located on the side of the crankcase.


If the adjustment is necessary, loosen the clutch adjuster lock nut ③ located at the bottom of the right crankcase cover and turn the clutch adjuster ④ with a screwdriver.

Turning the adjuster clockwise will cause the clutch lever to move upward.

2. The clutch lever is adjusted properly

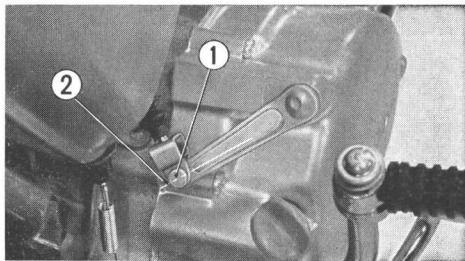

① Clutch cable connecting pin
② Index mark

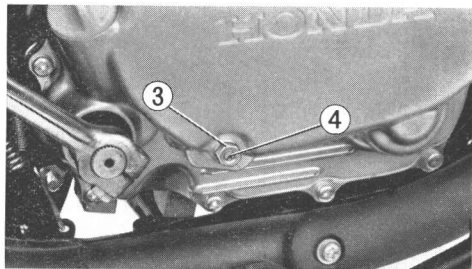

③ Clutch adjuster lock nut
④ Clutch adjuster