


Front Suspension Inspection


Check front fork action by locking the front brake and pumping the forks up and down several times. The suspension should function smoothly, with no oil leakage from the fork legs. Damaged, binding, or leaking front forks should be repaired before the motorcycle is operated further. Check security of all front fork and handlebar mounting bolts

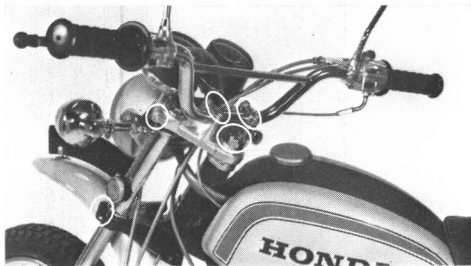

Front Fork Oil Change

Oil in both front fork legs should be changed at least once a year.

1. Remove the filler plugs ② (page 45) and drain plugs ① from each front fork, and allow the oil to drain. Pump the forks several times to ensure complete draining. Reinstall the drain plugs.

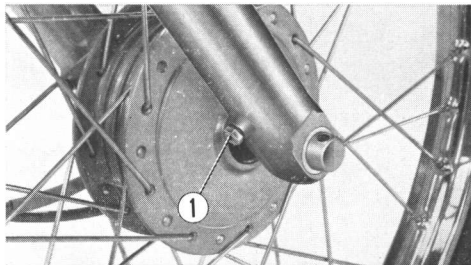

① Front fork drain plug