


## SPARK PLUG

(Refer to the maintenance precautions on page 52).

Specified spark plug:

DPR8EA-9 (NGK) or  
X24EPR-U9 (DENSO)

1. Clean any dirt from around the spark plug base.
2. Disconnect the spark plug cap and remove the spark plug with the spark plug wrench provided in the tool kit.

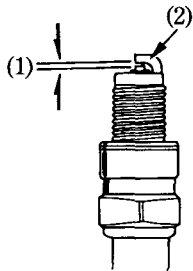

- (1) Spark plug gap      (2) Side electrode