

4. Tighten the axle nut to specified torque.

Axle nut torque:

93 N·m (9.5 kgf·m , 69 lbf·ft)

5. Recheck chain slack.

▲ WARNING

*** If a torque wrench is not used for this installation, see your Honda dealer as soon as possible to verify proper assembly.**

CAUTION:

*** Damage to the bottom part of the frame may be caused by excessive drive chain slack of more than:
60 mm (2.4 in)**