


Sub fuse:

The sub fuse (1) is located near the battery.

The specified fuse is:

15A

1. Remove the left side cover (page 33).
2. Open the fuse cover (2).
3. Pull out the old fuse and install a new fuse.
The spare fuse (3) is attached to the fuse holder on the battery holder.
4. Close the fuse cover and install the left side cover.

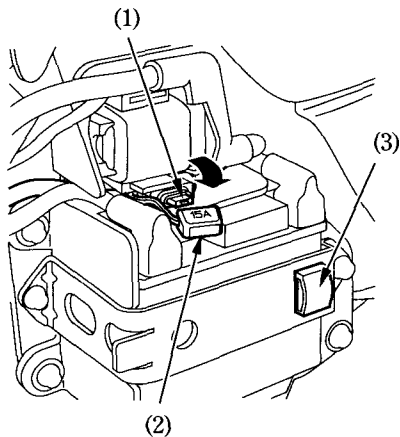

- (1) Sub fuse
- (2) Fuse cover
- (3) Spare fuse