







PARTS LOCATION

ABS and TCS Warning Light Operation

	Ignition "ON"	After Starting to Ride	Normal: OK Faulty: NG
ABS Warning Light	 <input type="checkbox"/> Comes ON  Blinks	  <ul style="list-style-type: none"> Goes OFF Remains ON Blinks 	OK NG NG NG
TCS Warning Light	<input type="checkbox"/> Comes ON  Blinks	 <ul style="list-style-type: none"> Goes OFF Remains ON Blinks 	OK NG NG NG

If either the ABS or TCS Warning Light does not operate properly,
See your authorized Honda dealer for service.