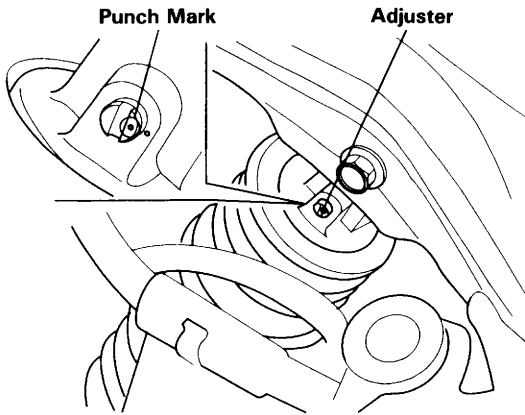

Damping adjustment:

The damping adjuster has four adjustment positions.

Remove the right side cover (page 66)

To adjust the adjuster to the standard position, proceed as follows:

1. Turn the adjuster clockwise until it will no longer go.
2. The adjuster is set in the standard position when the adjuster is turned counterclockwise 1 turn with aligned the punch marks on the adjuster and the reference mark.



Recommended damping adjuster positions:

CONDITIONS		DAMPING ADJUSTER Turn to clockwise from standard position	SPRING PRELOAD
Rider	Cargo		
One	—	0°	1 or 2
One	Cargo	180°	3
Two	—	270°	4
Two	Cargo	270° or 360°	5