

OPERATION

If the ABS warning light blinks while riding, stop the motorcycle in a safe place and turn off the engine.

Turn the ignition ON again. The light should come on, and then go off after starting to ride. If it does not go off or if it blinks again, ABS is not functioning, but the brakes still work like a conventional system and provide normal stopping ability. However, you should have the system checked by an authorized Honda dealer as soon as possible.

NOTE

- The ABS warning light may blink if you turn the rear wheel placing the motorcycle upright on the stand. This is normal. Turn the ignition OFF to stop the blinking.

CAUTION

- ***Two LED bulbs are used for the ABS warning light. Be sure that both bulbs light when the ignition is ON. If either or both bulbs fail to light, See your authorized Honda dealer.***

