

OPERATION

TCS Warning Light

Normally, this light comes on when the ignition is turned ON and goes off after starting to ride (see page 14). If there is an TCS problem, the warning light comes on and remains on — or blinks. The system does not operate when the TCS warning light is ON or blinking.

If the TCS warning light blinks while riding, stop the motorcycle in a safe place and turn off the engine.

Turn the ignition ON again. The light should come on, and then go off after starting to ride. If it does not go off or if it blinks again, the TCS is not functioning, you can drive the motorcycle without TCS. However, have the system checked by an authorized Honda dealer as soon as possible.

NOTE:

- When the TCS warning light blinks, the TCS is automatically disabled and the TCS OFF indicator turns on.
- The TCS warning light may blink if you turn the rear wheel placing the motorcycle upright on the stand. This is normal. Turn the ignition OFF to stop the blinking.

