

---

- Side Cowl

1. Remove the airduct/maintenance cover, shelter and front lower cover.
2. Remove the right fairing pocket (page 41).
3. Remove the fairing inner cowl by removing the bolts and screws.
4. Remove the front under cowl by removing the bolts and screws.
5. Remove the side cowl by removing bolts and screws.

