

## MAJOR COMPONENTS

(Information you need to operate this motorcycle)

---

### Front Brake Lever:

The distance between the tip of the brake lever and the grip can be adjusted by turning the adjuster.

### CAUTION:

- ***Align the arrow on the brake lever with the index mark on the adjuster.***

