


---

- Side Cover

1. Remove the saddlebag (see page 42)
2. Remove the seat (see page 37)
3. Remove the screw and trim clip. Pull the rear of the cover first, then rotate it clockwise and pull the front of the cover.

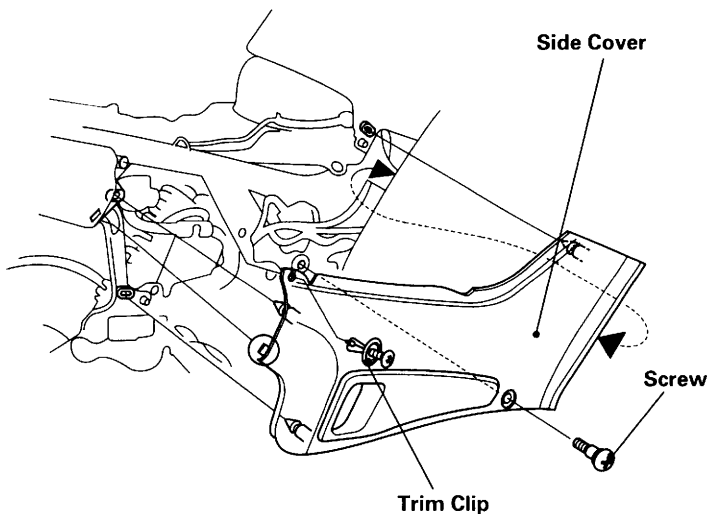

- Air Duct/Maintenance Cover

Remove the bolts, pull the cover out, then slide it to the rear.

