For related torque specifications, see page 92. The numbers indicate the sequence of disassembly.

