

---

## Battery Removal

The battery is located in the battery box under the left side cover.

1. Remove the left side cover (page 71).
2. Disconnect the negative (-) terminal lead from the battery first.
3. Remove the battery holder by removing the nut.
4. Pull the battery out of the battery box.
5. Disconnect the positive (+) terminal lead.

### Installation Note:

Reverse the removal procedure.

