


MAINTENANCE

- Top Cover

1. Remove the seat (see page 37).
2. Remove the top cover by removing bolts.

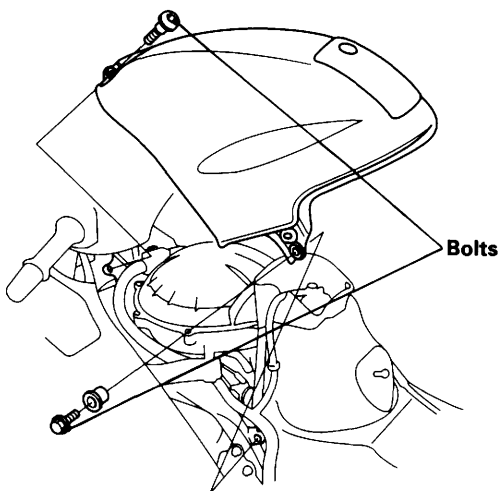

- Front Lower Cover

Remove the bolts, then slide the cover forward.

NOTE:

- Use the short collar bolt in the right rear hole when installing the front lower cover.

