

ITEMS	FREQUENCY	WHICHEVER → COMES		ODOMETER READING [NOTE (1)]									
		FIRST	× 1,000 km	1	6	12	18	24	30	36	Refer to page		
		↓	× 1,000 mi	0.6	4	8	12	16	20	24			
		NOTE	MONTH		6	12	18	24	30	36			
*	FUEL LINE					I		I		I	—		
*	THROTTLE OPERATION					I		I		I	99		
	AIR CLEANER	2					R			R	91		
	SPARK PLUGS					I		R		I	97		
*	VALVE CLEARANCE							I			—		
	ENGINE OIL			R		R		R		R	92		
	ENGINE OIL FILTER			R		R		R		R	94		
*	ENGINE IDLE SPEED			I	I	I	I	I	I	I	100		
	RADIATOR COOLANT	3				I		I		R	101		
*	COOLING SYSTEM					I		I		I	—		
*	SECONDARY AIR SUPPLY SYSTEM					I		I		I	—		
	FINAL DRIVE OIL					I		I		R	102		
	BRAKE FLUID	3			I	I	R	I	I	R	30, 32		
	BRAKE PADS WEAR				I	I	I	I	I	I	112		
	BRAKE SYSTEM			I		I		I		I	113		
*	BRAKELIGHT SWITCH					I		I		I	—		
*	HEADLIGHT AIM					I		I		I	—		
	CLUTCH SYSTEM					I		I		I	—		
	CLUTCH FLUID	3			I	I	R	I	I	R	33		
	SIDE STAND					I		I		I	104		
*	SUSPENSION					I		I		I	103		
*	NUTS, BOLTS, FASTENERS			I		I		I		I	—		
**	WHEELS/TYRES					I		I		I	—		
**	STEERING HEAD BEARINGS			I		I		I		I	—		