


## Main Switch

The main switch ① is located on the left side of the steering head. Functions of the respective switch positions are shown in the chart below.

① Main switch

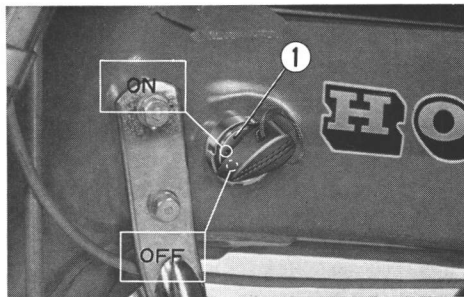

Key Position	Function	Key Removal
OFF (black dot)	All electrical circuits are open; engine will not start.	Key can be removed.
ON (red dot)	Electrical circuits are closed; engine can be started; headlight and tail/stop light can be operated; neutral indicator lamp lights with the transmission in neutral position.	Key cannot be removed.