


## Steering Lock

The steering lock ① is located on the steering stem directly below the steering head. Turn the handlebar to the left, insert the key into the lock, turn clockwise 180° and remove the key. This locks the steering and helps to prevent theft.

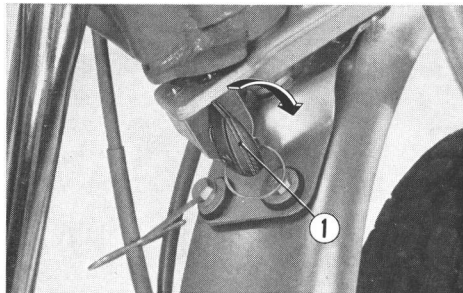


① Steering lock

## Helmet Holder

The helmet holder ② eliminates carrying your helmet when parking. The holder can be locked to prevent theft.

1. Unlock the holder with the main switch key ③.
2. Hang your helmet on the holder pin ④ and push the pin. This action automatically locks the helmet holder.

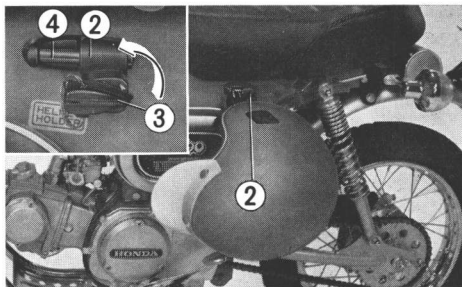

- ② Helmet holder
- ③ Main switch key
- ④ Holder pin