

FUEL AND OIL

Fuel Valve

The fuel valve is mounted under the left side of the fuel tank.

"OFF" position:

When the fuel valve lever ① is turned to the "OFF" position, fuel cannot flow from the fuel tank to the carburetor. Set the valve in this position whenever the motorcycle is not in use.

"ON" position:


When the fuel valve lever is turned to the "ON" position, fuel will flow from the main fuel supply to the carburetor. Set the valve in this position when the engine is to be operated from the main fuel supply.

"RES" position:

When the fuel valve lever is turned to the "RES" position fuel will flow from the reserve fuel supply to the carburetor. The fuel valve lever should be set in this position only after the main fuel supply

has been consumed. The reserve fuel supply is 0.5 ℓ (0.13 U.S. gal.). Switching to the reserve fuel supply serves as a warning to the rider that it is time to refill the fuel tank.

NOTE: Do not operate the machine with the fuel valve in the reserve position after refuelling, or you will defeat the purpose of the reserve fuel supply.

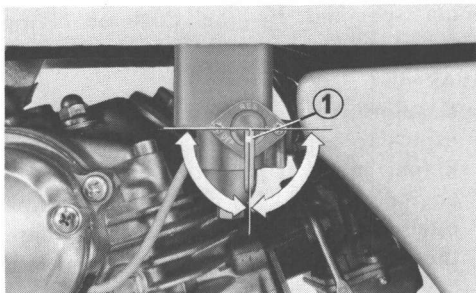

① Fuel valve lever