


Cam Chain Adjustment

If the cam chain is excessively noisy during engine operation, the tension of the cam chain is improper and requires adjustment.

1. Start the engine and set the idling speed to 1,300rpm.
2. Remove the rubber cap and loosen the cam chain adjuster ① (not the 6mm sealing bolt ②). This will automatically apply the proper tension to the cam chain.
3. After completing the adjustment, tighten the adjuster securely.

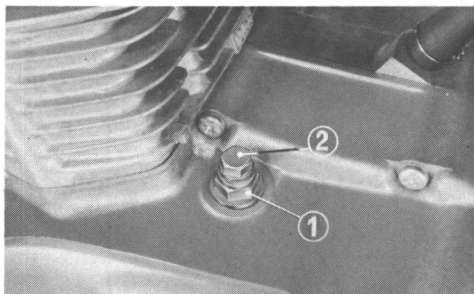

- ① Cam chain adjuster
② 6 mm sealing bolt