


Front Brake Adjustment

1. Raise the front wheel off the ground by placing a support block under the engine, spin the front wheel by hand and measure the distance the front brake lever ① must be moved before the brake starts to engage. Free play at the end of the brake lever should be 20~30 mm (0.8~1.2 in).

2. Major adjustments should be made using the adjuster located at the front wheel.

Loosen the lock nut ② and then turn the front brake adjusting nut ③.

Turning the nut in direction **A** will decrease the brake lever free play, and turning the nut in direction **B** will increase the free play.

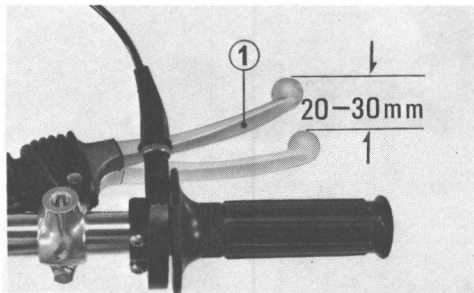

① Front brake lever



② Lock nut

③ Front brake adjusting nut