

- Proper wheel balance is necessary for safe, stable handling of the motorcycle. Do not remove or change any wheel balance weights. When wheel balancing is required, see your authorized Honda dealer. Wheel balancing is required after tire repair or replacement.
 - Foreign object intrusion of tire face will reduce the performance of any tire. Subsequent repair may not restore original safety factor.
 - Maintenance of spoke tension and wheel trueness are critical to safe motorcycle operation. During the first 200 miles (350 km), spokes will loosen more rapidly due to initial seating of parts. Excessively loose spokes may result in high speed instability and possible loss of control. See your authorized Honda dealer for maintenance of spoke tension and wheel trueness.
- CAUTION:** If the tire sidewall is punctured or damaged, the tire must be replaced.