

Starter Button

The starter button (1) is below the headlight switch. When the starter button is pressed and the transmission is in neutral, the starter motor will crank the engine.

NOTE:

* When the posi-torque speed range and reverse selector lever is in reverse position, the starter motor will not work.



(1) Starter button

Headlight Switch

The headlight switch (1) is below the engine stop switch. Its operating positions are as follows:

Position	Function
OFF	Headlight is off.
LO	Headlight is on low beam.
HI	Headlight is on high beam.



(1) Headlight switch