

## Gearshift Pedal

The gearshift pedal (1) is near the left footpeg. One full stroke of the gearshift pedal will shift the transmission. The pedal automatically returns to the horizontal position when released. Each stroke of the pedal engages the next gear in sequence.

Depress the pedal to up shift to a higher gear and raise the pedal to downshift.

When the Posi-Torque Speed Range and Reverse Selector lever (page 15) is in the Reverse Position, the gearshift pedal can only be shifted into the 1st gear position and neutral.



(1) Gearshift pedal

