


CLUTCH

1. Make sure the ignition switch is OFF.
2. Loosen the lock nut (2), and turn the clutch adjuster (1) counterclockwise until you feel slight resistance. Then turn 1/4 turn clockwise, and tighten the lock nut to hold the adjuster in this position.
3. After adjustment, start the engine and test ride the FOUR TRAX to be certain that the clutch is operating properly.

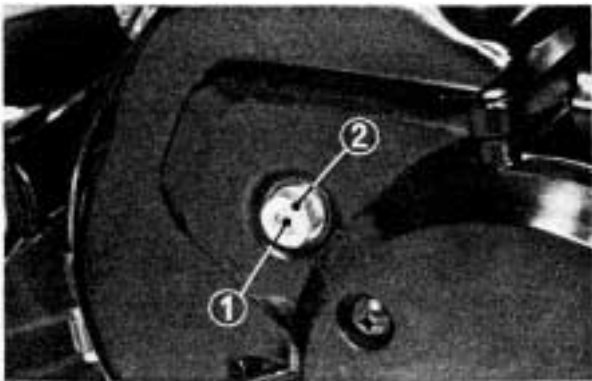

(1) Clutch adjuster


(2) Lock nut

AIR CLEANER CASE DRAIN TUBE

- Remove drain tube by removing clip (1) and drain the deposits.
- Reinstall the drain tube.

NOTE:

- * Service more frequently before starting the engine, or when deposits can be seen in the transparent section (2) of the drain tube.

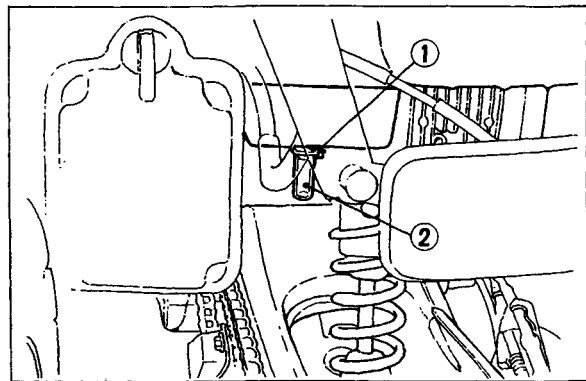

(1) Clip

(2) Transparent section